
LUMEN FOCUS FFRW 4WRAP INSTALL KIT FOR WRAP LUMINAIRES

WARNING - RISK OF FIRE OR ELECTRIC SHOCK. INSTALL THIS KIT ONLY IN LUMINAIRES THAT HAVE THE CONSTRUCTION FEATURES AND DIMENSIONS SHOWN IN THE PHOTOGRAPHS AND / OR DRAWINGS AND WHERE THE INPUT RATING OF THE RETROFIT KITS DOES NOT EXCEED THE INPUT RATING OF THE LUMINAIRE.

WARNING - TO PREVENT WIRING DAMAGE OR ABRASION, DO NOT EXPOSE WIRING TO EDGES OF SHEET METAL OR OTHER SHARP OBJECTS.

WARNING - RISK OF FIRE OR ELECTRIC SHOCK. LUMINAIRE WIRING AND ELECTRICAL PARTS MAY BE DAMAGED WHEN DRILLING FOR INSTALLATION OF LED RETROFIT KIT. CHECK FOR ENCLOSED WIRING AND COMPONENTS.



INSTALLATION TURN POWER OFF.

WARNING - RISK OF FIRE OR ELECTRIC SHOCK, LED RETROFIT KIT INSTALLATION REQUIRES KNOWLEDGE OF LUMINAIRES ELECTRICAL SYSTEMS. IF NOT QUALIFIED DO NOT ATTEMPT INSTALLATION. CONTACT A QUALIFIED ELECTRICIAN.

INE NO.

01

02

03

04

05

QTY

1

1

3



STEP 1 TURN OFF POWER REMOVE LENS FROM LUMINAIRE

STEP 2 REMOVE LAMPS

(RECYCLE LAMPS)



STEP 3 REMOVE BALLAST **COVER**





STEP 4 REMOVE BALLAST SOCKET BARS AND ANY WIRING FROM THE LUMINAIRE



STEP 5 HANG THE FERW4WRAP USING THE **EDGE OF THE LUMINAIRE**


CONNECT POWER TO THE DRIVER USING QUICK DISCONNECT PROVIDED IN THE KIT

CONNECT GROUND LEAD USING TEK SCREW AND WASHER ITEM 04 AND ITEM 05 TO THE LUMINAIRE.

INSTALL SAFETY TETHERS TO THE LUMINAIRE USING (2) TEK SCREWS PROVIDED IN THE KIT



STEP 7 INSTALL LENS TURN POWER BACK ON TO THE **FIXTURE**



PARTS LIST FOR FFRW 4 KIT


PART NAME

FFRW4WRAP

LENS **TEK SCREWS**

873-902 DISCONNECT

WASHER FOR GROUND

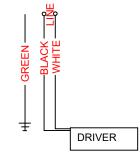

WHEN INSTALLING KIT MAINTAIN EXISTING GROUND ON THE FIXTURE



STEP 6 SWING FERW4WRAP AND SCURE TO THE LUMINAIRE USING THE EDGE

PAGE 1 OF 1